

# Camp Snap Pro Digital Camera



## Instructions for use




Read these instructions carefully before using this product and keep them for future reference. You can also find these instructions, along with tips & tricks, on our website:

<https://autovision.nl/faq/camp-snap-digital-camera/>



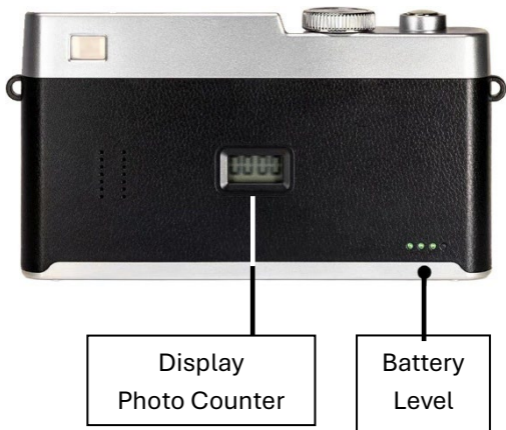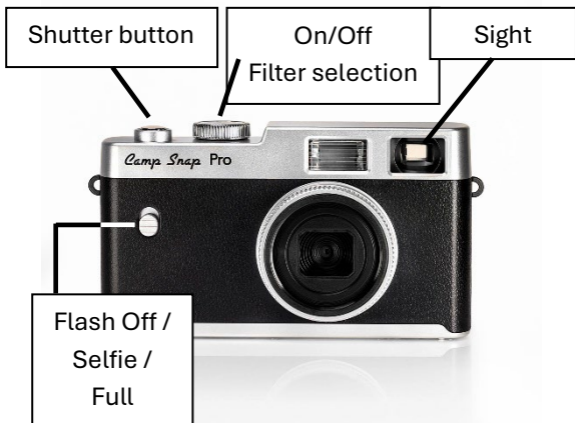

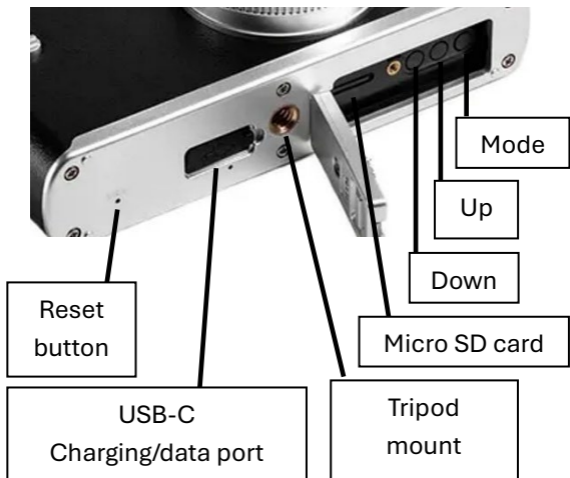

### **Turning on the camera:**

Set the on/off switch to one of the 4 filter settings to turn on the camera. You'll hear a tone, and the battery indicator(s) will light green, showing the battery level.

When the photo counter displays a 4-digit number, you're ready to take photos.

## **Set the metadata date on the photo:**

**The first time you use the camera, you must set the correct time and date.**

Loosen the Phillips screw on the bottom of the camera and open the cover. You will see three buttons for setting the time.

Press and hold the MODE button to enter the date setting mode. Adjust it with the UP and DOWN buttons. Press the MODE button again to save the year, then enter the month setting (Month-Day format), and then the time.

When the display "S 2" appears, this indicates the volume of the camera's indicator beeps: 0 = off, 1 = low, 2 = medium, 3 = high.

If the number of photos displayed is returned, this indicates that the setting is complete.

## **Take a photo:**

Look through the viewfinder and choose your photo composition. Tap the shutter button to take a photo. You'll hear a shutter sound to confirm the photo has been taken.

## **Camera Power Off:**

### **To turn off the camera**

Slide the mode switch to OFF. You'll hear a tone, and the photo count and battery LEDs will turn off.

### **Flash:**

Use the flash in low light.

Mode switch down = Off

Middle = Selfie mode

Up = Full power

### **Automatic Camera Power Off:**

The camera automatically turns off after 10 minutes of inactivity to save battery power.

### **Charging the camera:**

To charge the camera, connect the USB-C cable to the camera and then plug it into a (phone) charger or the USB-C port on a computer/laptop.

The LED will briefly turn green when the camera is connected. The LED at the bottom will turn red while charging, and the display will flash "Chg."

When charging is complete, the LED at the bottom will turn green and the display will go blank.

### **Tips for taking a photo:**

- 1) If the camera is off (photo count is not displayed), turn the camera on as described in step 1.
- 2) For best results, stand at least 1 meter (3 ft) away from your subject and take photos in good lighting conditions with the sun behind you.
- 3) Hold the camera steady and tap the shutter button. Hold the camera steady until you hear the shutter sound.

The display will show the number of photos taken.

- 4) Use the flash when taking photos in low light or indoors.

## **Viewing/Downloading Photos:**

- 1) Use the included USB-C charging cable to connect the camera to a computer, laptop, tablet, or phone.
- 2) The display shows "- - - -"
- 3) Open File Explorer/Finder on your computer and navigate to the "CAMPSNAP" folder. On your phone, select USB>DCIM.
- 4) Copy or view the files as desired.
- 5) Once the photos have been copied, you can delete all files from the camera.
- 6) Safely disconnect the camera from the PC/phone (eject/unplug).

## **SD Card Photo Storage:**

- 1) Your Camp Snap camera comes with a pre-installed 4GB micro SD card with space for approximately 500 photos. (Maximum SD card size: 128GB)
- 2) To remove the SD card, turn the camera off, loosen the Phillips screw on the bottom of your camera, and then click the cover open.

Push the SD card in, and it will pop out.

3) To replace the SD card, gently insert the card into the slot with the gold contacts facing the camera lens. Click it into place. Close the cover and replace the Phillips screw.

### **NOTE:**

The camera is an electronic product and is not waterproof. Do not expose the camera to liquids; keep it dry.

**How to change the filter effect on your camera:**

Use the dial to choose the desired filter:

Standard

Vintage 1

Vintage 2

Black and White



## How to install an additional or custom filter

Download a filter from the website:

<https://www.campsnapphoto.com/pages/filters>

1. Copy a filter file (.flt) to the root folder of your camera's SD card.
2. When you start the camera, "CUS" will appear for a second.

This means a custom filter has been loaded.

3. Note that the camera can only load one custom file at a time. If you have more than one on the camera, it will choose the first one it sees. We recommend having only one filter file on the camera at a time.

For example, you can create a folder on the SD card with the filters and place one of them in the root folder.

Take some epic photos!

You can also create your own filter at:

<https://filters.campsnapphoto.com/>

## Tech Info

Model number	CS-Pro V101
Pixels	16 MP
Resolution	4608x3456
File format	JPEG
Lens	f/2.2 – 2.56 mm (22.5 mm equivalent in 35mm terms)
Lens filter thread	37mm
Focus	Vast
Sight	Plexiglas
Distance	0.5m> infinite
Deviation	<1.5%
Sensor	1/3.0.6" CMOS
Shuttertime	1-1.5sec
White balance	Auto
ISO	Auto
Memory	4GB Micro SD card good for approx. 500 photos Max 128 GB
Flash	Build in Xeon
Info display	LCD 0.79"
Battery	Li-Ion 1200mAh for approx. 500 photos
Charge/Data	USB C
Statiefaansluiting	¼ inch
Dimensions	125 x 71 x 37 mm
Weight	144Gr
Operating temperature	-20C-60C
Humidity	5%-95%



WEEE (Waste Electrical and Directive)

WEEE (Waste Electrical and Electronic Equipment Directive)



Please note that, as a consumer electronic device, your device is subject to the European Directive 2002/96/EC on the reduction of electronic waste. Therefore, you must not dispose of your device with your household waste. Information about the disposal of old devices is available from your local authority, your waste disposal service, and the store where you purchased this product. You can return your device free of charge to a municipal collection point. By disposing of old devices properly, you prevent environmental damage and pose no risk to your health.

Please note that, as the end user, you are obligated to return batteries to a retailer or a collection point established by the public authority responsible for waste disposal.

Disposing of batteries Check local regulations regarding battery disposal or contact your local authority, your waste disposal company, or the store where you purchased the product. Batteries must never be disposed of with normal waste. If available, use a battery recycling center in your area or community.

See <https://autovision.nl/support-autovision/recycle/> for more information.

## Troubleshooting

<b>Failure</b>	<b>Solution</b>
Doesn't turn on	Make sure the camera is fully charged
Doesn't take pictures	Download photos according to the instructions
	Format or replace SD card
Camera is stuck, won't turn off	Press the reset button with a needle or toothpick. See page 3
Change filter	See Pages 8 and 9
Further questions	<a href="https://autovision.nl/faq/camp-snap-digital-camera/">https://autovision.nl/faq/camp-snap-digital-camera/</a>

*Camp Snap*

CS-PRO  
digital camera



Camp Snap Importer  
Benelux:  
Autovision Holding BV  
Burgemeester  
Engelbertsstraat 92  
2042 KP Zandvoort  
The Netherlands  
Website:

[www.autovision.nl](http://www.autovision.nl)

